

Jn series

JnMcard USER'S GUIDE

- This manual only describes the specification for JnMcard.
- These manuals should be read and understood before attempting to install or use the unit.

*** Specifications ***

JnMcard

SW-2	SW-1	Description
OFF	OFF	Execute internal EEPROM program, not execute copy function.
ON	OFF	Execute external EEPROM program, not execute copy function.
OFF	ON	Copy EEPROM program of JnMcard and content of D register into EEPROM of CPU.
ON	ON	Copy content of D register of EEPROM which is inside CPU into EEPROM of JnMcard.

- ◆ Can not turn switch during operation.
- ◆ To change another external EEPROM when execute external EEPROM: turn to internal EEPROM, power ON and OFF, then change.

*** Applicable Items ***

This is an option. The applicable item as follows,
 J22A32MR, J22A32MT, J24A32MR, J24A32MT

*** Installation ***

